

FLUID SYSTEMS® TFC® - HR MegaMagnum® ELEMENTS

High Rejection, Low Pressure RO Elements for Brackish Water

PRODUCT DESCRIPTION

Membrane Chemistry: Proprietary TFC® polyamide
 Membrane Type: TFC®-HR membrane
 Construction: Spiral wound with helical fiberglass outerwrap
 Applications: High rejection for brackish water treatment

SPECIFICATIONS


Part Numbers	Model	Permeate Flow gpd (m³/d)	Chloride Rejection percent	Membrane Area ft² (m²)	Spacer mil (mm)
8186101	18061-HR-2850	77,300 (293)	99.55	2,850 (265)	31 0.8
8186100	18061-HR-3050	82,500 (312)	99.55	3,050 (283)	28 0.7

Test Conditions: 2,000 mg/l NaCl solution at 225 psi (1,550 kPa) applied pressure, 20% recovery, 77°F (25°C) and pH 7.5

OPERATING AND DESIGN INFORMATION

Typical Operating Pressure: 150 - 350 psi (1,035 - 2,400 kPa)
 Maximum Operating Pressure: 450 psi (3,100 kPa)
 Maximum Operating Temperature: 113°F (45°C)
 Maximum Cleaning Temperature: 113°F (45°C)
 Maximum Continuous Free Chlorine: <0.1 mg/l
 Allowable pH - Continuous Operation: 4 - 11
 Allowable pH - Short Term Cleaning: 2.5 - 11
 Maximum Differential Pressure Per Element: 12 psi (82.7 kPa)
 Maximum Differential Pressure Per Vessel: 60 psi (414 kPa)
 Maximum Feed Turbidity: 1 NTU
 Maximum Feed SDI (15 minute test): 5

NOMINAL DIMENSIONS AND WEIGHT

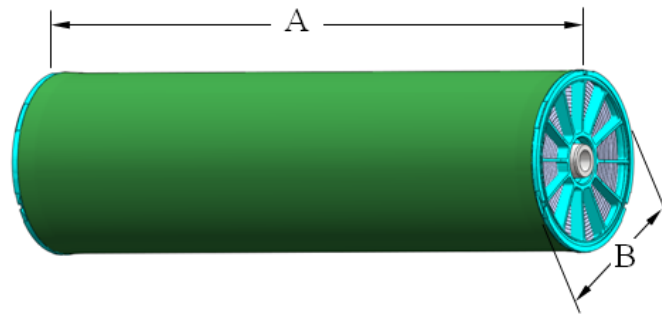

Model	A inches (mm)	B inches (mm)	Weight lbs (kg)
18061-HR-2850	61 (1,549)	18 (457)	250 (113.0)
18061-HR-3050	61 (1,549)	18 (457)	250 (113.0)

Performance:

Performance specifications shown on the front side of this document are nominal values. Individual element permeate flows may vary $\pm 15\%$ from the values shown. Minimum chloride ion rejection is 99.2% at the conditions shown.

System performance should be predicted using KMS ROPRO® software. Element performance is based on the nominal values shown.

System operating data should be normalized and key performance parameters tracked using KMS NORMPRO® software.

Operating Limits:

- **Operating Pressure:** Maximum operating pressure is 450 psi (3,100 kPa). Typical operating pressure for TFC®-HR systems is in the range of 150 psi (1,035 kPa) to 350 psi (2,400 kPa). Actual operating pressure is dependent upon system flux rate (appropriate for feed source) as well as feed salinity, recovery and temperature conditions.
- **Permeate Pressure:** Permeate pressure should not exceed feed-concentrate pressure by more than 5 psi (34 kPa) at any time (on-line, off-line and during transition).
- **Differential Pressure:** Maximum differential pressure per element is 12 psi (82.7 kPa). Maximum differential pressure for pressure vessel is 60 psi (414 kPa).
- **Temperature:** Maximum operating temperature is 113°F (45°C). Maximum cleaning temperature is 113°F (45°C).
- **pH:** Allowable range for continuous operation is pH 4-11. Allowable range for short term cleaning is pH 2.5-11. It is recommended to limit the exposure of the TFC-HR membrane to the extended pH range to 4 hours, once per month.
- **Turbidity and SDI:** Maximum feed turbidity is 1 NTU. Maximum feed Silt Density Index (SDI) is 5.0 (15 minute test). Experience has shown that feedwater with turbidity greater than 0.2 NTU generally results in frequent cleanings.

- **Recovery:** Maximum recovery is site and application specific. Typical individual element recovery is $\leq 20\%$. Recovery limits should be determined using KMS ROPRO program.

Chemical Tolerance:

- **Chlorine:** Exposure of TFC-HR membrane to free chlorine or other oxidizing agents such as permanganate, ozone, bromine and iodine is not recommended. TFC-HR membrane has a free chlorine tolerance of approximately 1,000 ppm-hours based on testing at 77°F (25°C), pH 8. This tolerance may be significantly reduced if catalyzing metals such as iron are present or if the pH and/or temperature are different. Sodium metabisulfite (without catalysts such as cobalt) is the preferred reducing agent. TFC-HR membrane has a chloramine tolerance of approximately 60,000 ppm-hours in the absence of free chlorine based on testing at 77°F (25°C), pH 8.
- **Cationic (Positively Charged) Polymers and Surfactants:** TFC-HR membrane may be irreversibly fouled if exposed to cationic (positively charged) polymers or surfactants. Exposure to these chemicals during operation or cleaning is not recommended.

Lubricants:

For element loading, use only the recommended silicone lubricant (or approved equivalent), water or glycerin to lubricate O-rings and brine seals. The use of petroleum based lubricants or vegetable based oils may damage the element and void the warranty.

Service and Ongoing Technical Support:

KMS has an experienced staff of professionals available to assist endusers and OEM's for optimization of existing systems and support with the development of new applications. Along with the availability of supplemental technical bulletins, KMS also offers a complete line of KOCHTREAT® and KOCHKLEEN® RO pretreatment and maintenance chemicals.

The information contained in this publication is believed to be accurate and reliable, but is not to be construed as implying any warranty or guarantee of performance. We assume no responsibility, obligation or liability for results obtained or damages incurred through the application of the information contained herein. Refer to Standard Terms and Conditions of Sale and Performance Warranty documentation for additional information.

Koch Membrane Systems, Inc., www.kochmembrane.com

Corporate Headquarters: 850 Main Street, Wilmington, Massachusetts 01887-3388, US, Tel. Toll Free: 1-888-677-5624, Telephone: 1-978-694-7000, Fax: 1-978-657-5208
European Headquarters: Koch Chemical Technology Group Ltd., Units 3-6, Frank Foley Way, Stafford ST16 2ST, GB, Telephone: +44-178-527-2500, Fax: +44-178-522-3149

• San Diego US • Aachen DE • Lyon FR • Madrid ES • Milan IT • Wijnegem BE • Beijing & Shanghai CN • Mumbai & Chennai IN • Melbourne & Sydney AU • Singapore • Sao Paulo BR • Manama BH •

The FLOW LINES DESIGN, FLUID SYSTEMS, TFC, ROPRO, NORMPRO, MegaMagnum, KOCHKLEEN and KOCHTREAT are registered trademarks of Koch Membrane Systems, Inc. in the US and other countries.

The STYLIZED K is a registered trademark of Koch Industries, Inc. in the US and other countries.

Koch Membrane Systems, Inc. is a Koch Chemical Technology Group, LLC company.

© 2010 Koch Membrane Systems, Inc. All rights reserved worldwide. 11/10