



CONTACT: Rob Carlton
Koch Membrane Systems
rob.carlton@kochcm.com

Koch Membrane Systems Installs the UK's Largest Membrane Bioreactor System

Wilmington, MA – January 17, 2019 — Facing limited space and strict water directives, Koch Membrane Systems (KMS) upgraded the Woolston Wastewater Treatment Works near Southampton, England — providing increased production capacity without expanding the plant's footprint.

KMS, in cooperation with 4Delivery, replaced the Woolston facility's existing conventional activated sludge system with the PULSION® MBR ultrafiltration membrane — dramatically improving effluent quality by increasing nutrient removal and achieving nearly 100 percent bacteria and solids removal. As an added benefit, the plant's long-standing odor control problem was eliminated with the new system.

"Membrane bioreactor technology is innovative, because it uses ultrafiltration and biological treatment," said Jack Noble, general manager water and wastewater EMEA at KMS. "PULSION MBR technology continues to be at the forefront of this field. In addition to improved effluent quality and increased capacity, the technology significantly reduces operating and life-cycle costs."

As the United Kingdom's largest MBR, the system is designed to treat wastewater at an average flow of 19,000 cubic meters per day (5 MGD), with a maximum daily capacity of 42,000 cubic meters (11 MGD).

Additionally, the plant features eight filtration trains comprised of five PULSION membrane modules each. With more than 76,000 m² of membrane area, the system produces permeate meeting strict EU Bathing Water directives.


For more information about KMS and PULSION MBR ultrafiltration membranes, visit www.kochmembrane.com.



###

About PULSION® MBR

PULSION MBR pulses a large bubble through a chambered hollow fiber bundle, creating a highly efficient piston-like pumping action. Leveraging the unique single header and central aeration design of the proven PURON membrane module design, this innovative product harnesses the aeration energy to improve productivity, reduce energy consumption, and provide better solids management.

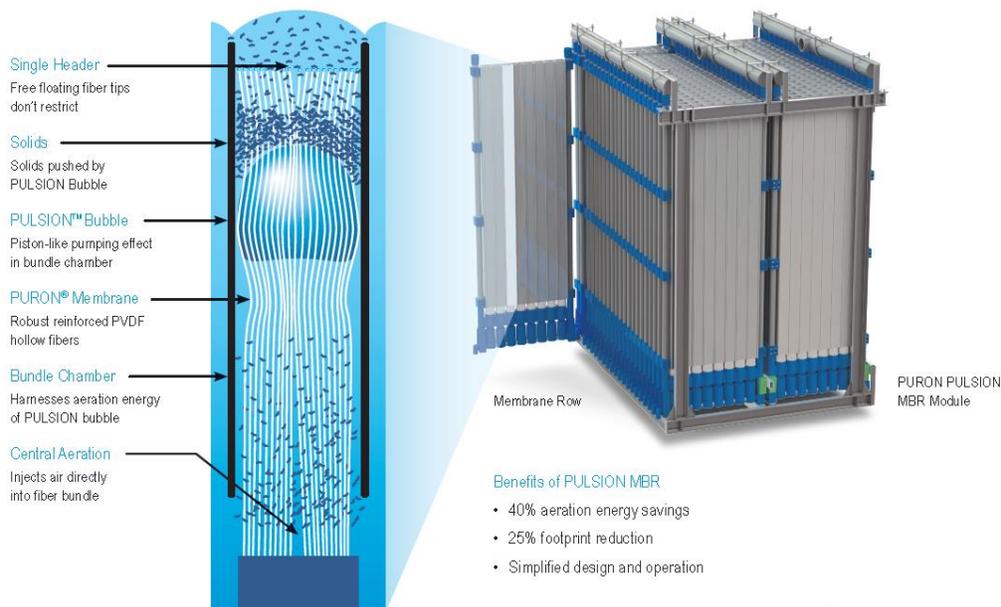

About Koch Membrane Systems

Filtration for a Better Future...

For more than five decades, Koch Membrane Systems, Inc. (KMS) has led the way in developing innovative membrane technologies that serve a diverse range of industries and applications around the globe. KMS provides comprehensive membrane filtration solutions to many markets, including municipal, food and beverage, life sciences and industrial processes. KMS is focused on helping thousands of its customers to recover high value products, reduce their water footprint, increase productivity, and reduce costs. www.kochmembrane.com

©2019 Koch Membrane Systems, Inc. All rights reserved worldwide. For related trademark information, visit www.kochmembrane.com/legal. Koch Membrane Systems, Inc. is a Koch Chemical Technology Group, LLC Company.